

Toro Greensmaster 3320



PART NO.	DESCRIPTION	REPLACES
1. 100-533	Air Filter	Toro 108-3811
2. 102-119	Air Filter	Briggs & Stratton 692519
3. 102-664	Pre-Filter	Briggs & Stratton 692520
4. 425-536	ATC Fuse (case of 5)	Toro 109355
5. 425-573	ATC Fuse (case of 5)	Toro 218-578
6. 230-929	Tapered Roller Bearing Set	Toro 254-78
7. 215-285	Tapered Bearing Set	Toro 1-543508
8. 150-008	Recoil Starter Assembly	Briggs & Stratton 841729
9. 120-562	Fuel Filter	Toro 108-3854
10. 120-566	Fuel Filter Shop Pack (case of 25)	Toro 108-3854
11. 120-570	Fuel Filter Merchandiser	Toro 108-3854
12. 120-444	Fuel Filter	Toro 108-3831
13. 120-914	Fuel Filter	Toro 94-2690
14. 120-212	Inline Fuel Shutoff Valve	Toro 1-603770
15. 120-114	Hose Clamp (case of 2)	Briggs & Stratton 791850
16. 520-441	Fuel Pump	Briggs & Stratton 808656
17. 520-590	Fuel Pump	Briggs & Stratton 808656
18. 435-195	Voltage Regulator	Briggs & Stratton 845907
19. 435-115	Diode Assembly	Briggs & Stratton 393814
20. 440-450	Ignition Coil	Briggs & Stratton 845606
21. 430-009	Indak Ignition Key (case of 2)	Briggs & Stratton 691959
22. 430-950	Indak Ignition Switch	Toro 83-0020
27. 430-457	Delta Seat Switch	Toro 92-6282
23. 285-226	Grease Cap	Toro 1-543513
24. 120-485	Oil Filter	Toro 107-7817
25. 120-483	Oil Filter Shop Pack (case of 12)	Toro 107-7817
26. 515-015	Piston Std.	Briggs & Stratton 793214
28. 130-526	Champion Spark Plug	Champion RC12YC
29. 130-069	Champion Spark Plug	Champion XC92YC
30. 130-276	NGK Spark Plug	NGK ZFR5F
31. 131-015	Torch Spark Plug	Torch K5RTC
32. 130-760	Torch Spark Plug Shop Pack (case of 100)	Torch K5RTC

CONTINUED ON NEXT PAGE

Toro Greensmaster 3320 (Cont.)


PART NO.	DESCRIPTION	REPLACES
33. 135-081	Spark Plug Boot	Briggs & Stratton 66538S
34. 135-008	Spark Plug Terminal	Briggs & Stratton 493880S
35. 475-454	Valve Cover Gasket	Briggs & Stratton 8060395
36. 435-803	Starter Brush Retainer	Briggs & Stratton 691293
37. 435-211	Starter Drive Kit	Briggs & Stratton 496881
38. 175-505	Valve Stem #412	Toro 5108