

Toro Groundsmaster 3500G



| PART NO. | DESCRIPTION | REPLACES |
|-------------|-----------------------------|------------------|
| 1. 100-533 | Air Filter | Toro 108-3811 |
| 2. 425-502 | ATC Fuse (case of 5) | Toro 109103 |
| 3. 425-536 | ATC Fuse (case of 5) | Toro 109355 |
| 4. 425-573 | ATC Fuse (case of 5) | Toro 218-578 |
| 5. 302-627 | Silver Streak Toothed Blade | Toro 107-0235-03 |
| 6. 345-190 | Combination Blade | Toro 108-9026-03 |
| 7. 355-100 | Medium-lift blade | Toro 104-5183 |
| 8. 120-137 | Oil Filter | Toro 115-8189 |
| 9. 120-710 | Transmission Filter | Toro 86-3010 |
| 10. 125-336 | Fuel Tank Bushing | Toro 46-6560 |
| 11. 430-334 | Indak Ignition Switch | Toro 104-2541 |
| 12. 430-401 | Delta PTO Switch | Toro 95-4108 |
| 13. 430-457 | Delta Seat Switch | Toro 92-6282 |
| 14. 175-505 | Valve Stem #412 | Toro 5108 |