

## Toro Groundsmaster 3505D



PART NO.	DESCRIPTION	REPLACES
1. 100-533	Air Filter	Toro 108-3811
2. 102-305	Air Filter	Toro 108-3810
3. 102-073	Air Filter	Toro 108-3814
4. 102-077	Inner Air Filter	Toro 108-3816
5. 425-536	ATC Fuse (case of 5)	Toro 109355
6. 425-573	ATC Fuse (case of 5)	Toro 218-578
7. 230-060	Bearing	Toro 38-7820
8. 215-285	Tapered Bearing Set	Toro 27-0960
9. 230-961	Bearing	Toro 251-347
10. 230-969	Bearing	Toro 108-9017
11. 435-233	Mega-Fire Alternator	Toro 131-6557
12. 120-678	Fuel Filter	Toro 98-7612
13. 125-336	Fuel Tank Bushing	Toro 46-6560
14. 302-627	Silver Streak Toothed Blade	Toro 107-0235-03
15. 355-100	Medium-Lift Blade	Toro 104-5183
16. 345-190	Combination Blade	Toro 108-9026-03
17. 285-226	Grease Cap	Toro 1-543513
18. 120-360	Oil Filter (diesel only)	Toro 108-3841
19. 120-818	Transmission Filter	Toro 54-0110
20. 120-519	Transmission Filter	Toro 23-2300
21. 120-710	Transmission Filter	Toro 86-3010
22. 430-334	Indak Ignition Switch	Toro 104-2541
23. 430-401	Delta PTO Switch	Toro 95-4108
24. 430-457	Delta Seat Switch	Toro 92-6282
25. 175-505	Valve Stem #412	Toro 5108
26. 165-524	Carlisle Tire (26x12.00-12)	Toro 99-5434