

Toro Groundsmaster 360



| PART NO. | DESCRIPTION | REPLACES |
|-------------|--------------------------------|------------------|
| 1. 102-305 | Air Filter | Toro 108-3810 |
| 2. 102-847 | Air Filter | Toro 110-0624-03 |
| 3. 425-536 | ATC Fuse (case of 5) | Toro 109355 |
| 4. 425-573 | ATC Fuse (case of 5) | Toro 218-578 |
| 5. 230-929 | Tapered Roller Bearing Set | Toro 254-78 |
| 6. 215-285 | Tapered Bearing Set | Toro 1-543508 |
| 7. 285-925 | Self-Tapping Screw (case of 4) | Toro 32144-41 |
| 8. 340-130 | Notched Hi-Lift Blade | Toro 105-7784-03 |
| 9. 345-300 | Standard Blade | Toro 121-5347-03 |
| 10. 285-226 | Grease Cap | Toro 1-543513 |
| 11. 120-360 | Oil Filter (diesel only) | Toro 108-3841 |
| 12. 125-336 | Fuel Tank Bushing | Toro 46-6560 |
| 13. 430-413 | Delta Safety Switch | Toro 82-2190 |
| 14. 430-401 | Delta PTO Switch | Toro 95-4108 |
| 15. 175-505 | Valve Stem #412 | Toro 5108 |
| 16. 210-165 | Deck Wheel | Toro 1-603299 |