

Toro Groundsmaster 4000D



| PART NO. | DESCRIPTION | REPLACES |
|-------------|-----------------------------|-----------------|
| 1. 102-073 | Air Filter | Toro 108-3814 |
| 2. 102-305 | Air Filter | Toro 108-3810 |
| 3. 102-077 | Inner Air Filter | Toro 108-3816 |
| 4. 425-573 | ATC Fuse (case of 5) | Toro 218-578 |
| 5. 230-969 | Bearing | Toro 108-9017 |
| 6. 258-071 | True Blue Belt | Toro 55-7660 |
| 7. 120-678 | Fuel Filter | Toro 98-7612 |
| 8. 125-336 | Fuel Tank Bushing | Toro 46-6560 |
| 9. 340-700 | Hi-Lift Blade | Toro 92-5608-03 |
| 10. 302-686 | Silver Streak Toothed Blade | Toro 92-5608-03 |
| 11. 302-636 | Silver Streak Toothed Blade | Toro 106-7166 |
| 12. 120-360 | Oil Filter (diesel only) | Toro 108-3841 |
| 13. 120-818 | Transmission Filter | Toro 54-0110 |
| 14. 120-519 | Transmission Filter | Toro 23-2300 |
| 15. 120-710 | Transmission Filter | Toro 86-3010 |
| 16. 430-334 | Indak Ignition Switch | Toro 104-2541 |
| 17. 430-401 | Delta PTO Switch | Toro 95-4108 |
| 18. 175-505 | Valve Stem #412 | Toro 5108 |
| 19. 165-524 | Carlisle Tire (26x12.00-12) | Toro 99-5434 |
| 20. 210-018 | Deck Wheel | Toro 29-4820 |
| 21.435-233 | Mega-Fire Alternator | Toro 131-6557 |