

## Toro Groundsmaster 4100D



PART NO.	DESCRIPTION	REPLACES
1. 102-305	Air Filter	Toro 108-3810
2. 102-073	Air Filter	Toro 108-3814
3. 102-077	Inner Air Filter	Toro 108-3816
4. 425-573	ATC Fuse (case of 5)	Toro 218-578
5. 230-969	Bearing	Toro 108-9017
6. 265-687	OEM Replacement Belt	Toro 108-8077
7. 258-071	True Blue Belt	Toro 55-7660
8. 120-678	Fuel Filter	Toro 98-7612
9. 125-336	Fuel Tank Bushing	Toro 46-6560
10. 340-700	Hi-Lift Blade	Toro 92-5608-03
11. 302-686	Silver Streak Toothed Blade	Toro 92-5608-03
12. 120-360	Oil Filter (diesel only)	Toro 108-3841
13. 120-818	Transmission Filter	Toro 54-0110
14. 120-519	Transmission Filter	Toro 23-2300
15. 120-710	Transmission Filter	Toro 86-3010
16. 430-334	Indak Ignition Switch	Toro 104-2541
17. 430-401	Delta PTO Switch	Toro 95-4108
18. 175-505	Valve Stem #412	Toro 5108
19. 165-524	Carlisle Tire (26x12.00-12)	Toro 99-5434
20. 165-450	Carlisle Tire (29x14.00-15)	Toro 95-3465
21. 210-018	Deck Wheel	Toro 29-4820
22. 435-233	Mega-Fire Alternator	Toro 131-6557