

Toro Groundsmaster 4500D



PART NO.	DESCRIPTION	REPLACES
1. 102-073	Air Filter	Toro 108-3814
2. 102-077	Inner Air Filter	Toro 108-3816
3. 230-060	Bearing	Toro 38-7820
4. 230-969	Bearing	Toro 108-9017
5. 230-961	Bearing	Toro 251-347
6. 302-627	Silver Streak Toothed Blade	Toro 107-0235-03
7. 355-100	Medium-Lift Blade	Toro 104-5183
8. 345-190	Combination Blade	Toro 108-9026-03
9. 120-360	Oil Filter (diesel only)	Toro 108-3841
10. 120-818	Transmission Filter	Toro 54-0110
11. 120-519	Transmission Filter	Toro 23-2300
12. 120-710	Transmission Filter	Toro 86-3010
13. 165-524	Carlisle Tire (26x12.00-12)	Toro 99-5434
14. 165-450	Carlisle Tire (29x14.00-15)	Toro 95-3465
15.435-233	Mega-Fire Alternator	Toro 131-6557